


## Fitting (see front cover)

Take an 8' length of dowel or similar (obtainable from your DIY store). Screw the enclosed cup hook into the end.



**FIXINGS (SCREW EYES)** supplied, are used here for top fixing into a plugged wall. They are also screwed into wood fascias or straight into the framework bottom, top and middle each side of wooden conservatories. For wood and PVCu always install bottom fixings first and try on shade to see exactly where top fixings and then middle should go.

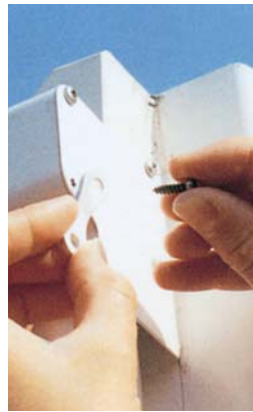

**FIXINGS (KOALA BRACKETS)** are used in conjunction with **existing** screws at **gutter level** on aluminium buildings. For all other aluminium and PVCu fixings use your own self-tapping screws – into the framework.

**TOP, MIDDLE, BOTTOM EACH END (SIDE)**

**YOU DO NOT NEED TO CLIMB ON YOUR ROOF!**

**PUTTING ON THE SHADE**  
Unfold the shade and toss it onto the roof. Hook shade top, middle and bottom into fixings one end. Using a pole (with cup hook screwed in end) hook into spare top rubber tensioner loop. Walk around the conservatory, holding the shade aloft to clear any obstruction. Draw it up the roof. Hook onto fixings.

**FOR HALF SHADE**  
Unhook front tensioners, fold shade over to halfway point. Rehook front hooks onto back.



### **NEW ADJUSTABLE TENSIONERS (see front cover)**

Loop through eyelets let into the shade each end. Pull the free end through the eye and pull hard into tension and pull outwards into slit. Press lock plug into adjacent vacant hole firmly (as illustrated). Reverse procedure for release.

**N.B. Extra eyelets on the front are for tie down, if required.**

**UKOZ, 5 Howard Lane, Boughton, Northampton NN2 8RS**

**Tel: 01604 842220**

**IF YOU HAVE ANY DIFFICULTY, SIMPLY RING**

**[www.koalashade.co.uk](http://www.koalashade.co.uk)**

